

MX500 and MX600

Zone 2 Audio System Operating Instructions.

Select Zone 2 from the Main Page by Pressing the Zone 2 Button.

Buttons

◇ TUNER	STAT ↑ ◇
◇	STAT ↓ ◇
◇ SAT or CABLE	CHAN ↑ ◇
◇	CHAN ↓ ◇
◇ OFF	ON ◇

PAGE 1

- TUNER - Selects the AM/FM Tuner as the source for Zone 2.
- SAT or CABLE - Selects the Satellite Receiver or Digital Cable Box as the source for Zone 2.
- OFF - Turns Zone 2 Off.
- STAT ↑ - Changes the AM/FM Tuner to the next higher channel.
- STAT ↓ - Changes the AM/FM Tuner to the next lower channel.
- CHAN ↑ - Changes the Satellite Receiver or Digital Cable Box to the next higher channel
- CHAN ↓ - Changes the Satellite Receiver or Digital Cable Box to the next lower channel
- ON - Turns Zone 2 on.

◇ CD	DISC # ◇
◇	RANDM ◇
◇	CANCL ◇
◇ DVD	◇
◇ XM or SIRUS	◇

PAGE 2

- CD - Selects the CD Player as the source for Zone 2.
- DVD - Selects the CD Player as the source for Zone 2.
- XM or SIRUS - Selects the Satellite Radio as the source for Zone 2.
- DISC # - Changes disk on a multi disk CD player
- RANDM - Allows random play of all CDs
- CANCL - Cancels Randon CD mode.

NOTE:

While in Zone 2, buttons 11-13 and 15-19 control the CD player as described on the main page instructions. The numeric buttons will also operate the Satellite Receiver or Digital Cable Box as described on the main page instructions.