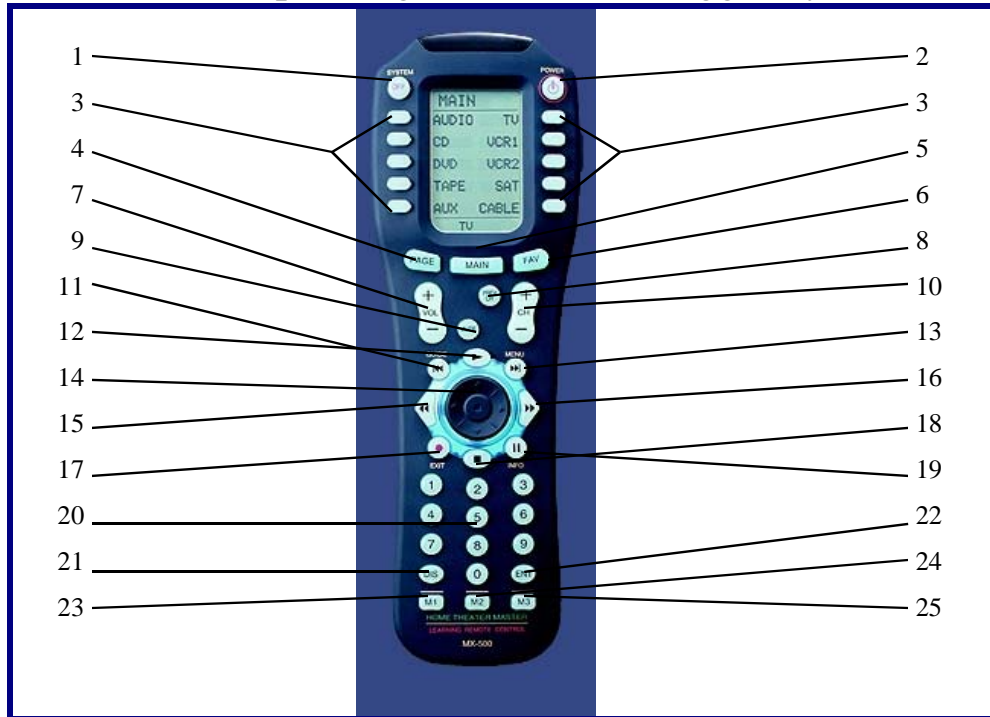 
 
 

 
 
 
 
 


MX500 Operating Instructions (Toggle System)



1. **System and Off Button** - Turns system on and off. Sets up system for TV viewing.
2. **Power** - Turns individual power on and off to selected audio / video device.
3. **10 Main Page Buttons** - HOLD button for 3 seconds to switch system to desired audio / video component AND change remote for control of selected component. Just TAP the button to only change remote for control of selected component.
4. **Page** - Used to display additional buttons for control of selected audio / video device.
5. **Main** - Returns remote control screen to Main page.
6. **Fav** - Not used at this time.
7. **Vol** - Turns system volume up and down.
8. **Prev Ch** - Switches cable or satellite channel to previously viewed channel.
9. **Mute** - Mutes the system volume.
10. **Ch** - Scrolls cable or satellite channels up or down.
11. **Guide and**  - Selects program guide when using cable or satellite. Selects previous chapter or track when using CD, DVD, or DVR player.
12.  - Play button when using CD, DVD, VCR, or DVR. [PageUp] when using cable or satellite.
13. **Menu and**  - Selects menu when using cable or satellite. Selects next chapter or track when using CD, DVD, or DVR player.
14. **Cursor Control Button** - Used for up, down, right, left and select control button when needed for on-screen control of video devices.
15.  - Rewind button when using CD, DVD, VCR, or DVR.
16.  - Fast Forward button when using CD, DVD, VCR, or DVR.
17. **Exit and**  Used to exit from on-screen control of video devices. Also used as record button for VCR or DVR.
18.  - Stop button when using CD, DVD, VCR, or DVR. [PageDown] when using cable or satellite.
19. **Info and**  - Displays on-screen information for cable or satellite. Also used as pause button for CD, DVD, VCR, etc.
20. **Numeric Buttons 0-9** - Used to manually enter channel number when using cable, satellite, or VCR. Also used to enter chapter or track number manually when using CD, DVD, or DVR.
21. **Dis** - Displays on-screen information for CD, DVD, VCR, or DVR.
22. **Ent** - Enter button (when needed) to manually enter channel number when using cable, satellite, or VCR.
23. **M1- (Optional) Music Only On Button**. Turns all installed audio systems on and selects the _____ for operation. Leaves TV power off.
24. **M2 - (Optional) Music Only On Button**. Turns all installed audio systems on and selects the _____ for operation. Leaves TV power off.
25. **M3 - (Optional) Music Only Off Button**. Turns all installed audio systems off after using the M1 or M2 button for Music Only.

Special Note! IF you ever have trouble operating your system, the problem is usually related to power synchronization. Try MANUALLY turning ON the power to ALL components, and then select a component from the MAIN screen.