

14320 Justice Road  
Midlothian, VA 23113  
Central Virginia (804) 379-1348  
Hatteras Island (252) 995-0103  
Fax (804) 379-1381  
<http://www.moseleyelectronics.com>  
DCJS # 11-6428

## MX900 & MX880 Theater Master Remote Stereo & Television Operating Instructions

- ◆ **Turn the TV On:** Press WATCH and then "ON" to turn on the TV. This may turn on other components as well. The remote will then setup the system for operation of the cable box or satellite receiver.
- ◆ **Turn the Stereo On:** Press LISTEN and then "ON" to turn on the Stereo Receiver. This may turn on other components as well.
- ◆ **Turn the TV Off:** Press WATCH and then "OFF". This will turn off the TV and, on some systems, other components as well.
- ◆ **Turn the Stereo Off:** Press LISTEN and then "OFF". This will turn off the Stereo Receiver and, on some systems, other components as well.
- ◆ **Select a Component:** Select a component for TV viewing by pressing WATCH and then select a video component. Select component for the stereo system by pressing LISTEN and then select an audio component.
- ◆ **Control Selected Component:** After you select any component the remote then becomes the control for the component selected. The "hard" buttons at the bottom control the component selected. The LCD shows additional buttons for the selected component. The top of the LCD display always shows which component is being controlled. The bottom of the LCD shows the number of additional button pages (if any). You can scroll between pages by pressing one of the page buttons. Some components require a separate power command when selected. If this is required, you will see a POWER button on the LCD screen when you select the component. This button should be pressed before attempting to control the component.
- ◆ **Volume & Mute:** These buttons control the TV when a component is selected from the WATCH menu, and the Stereo Receiver when a component is selected from the LISTEN menu.
- ◆ **Special Note:** IF you ever have trouble operating your system, the problem is usually related to power synchronization. Try MANUALLY turning ON the power to ALL components, and then select a component from the WATCH or LISTEN screen.

